



## Installation

- 1 Screw sensor probe into Purifier ensuring bonded seal is fitted
- 2 Site and fix control box in preferred position
- 3 Run cable through to sensor and secure any spare cable
- 4 Make connections to sensor terminals NB \* Brown cable to central connector
- 5 Slide protective sleeve over sensor assembly

## Operation Sequence

Battery Test	Press test button	2 beeps & 2 flashes
Water in Fuel		continuous beeps & flashes
Low Battery	Press test button	single beep then a single beep every 30 seconds