


GOLDENROD®

NO. 496 WATER-BLOCK® FUEL TANK FILTER

IMPORTANT: Always mount cutoff valve between filter and tank!

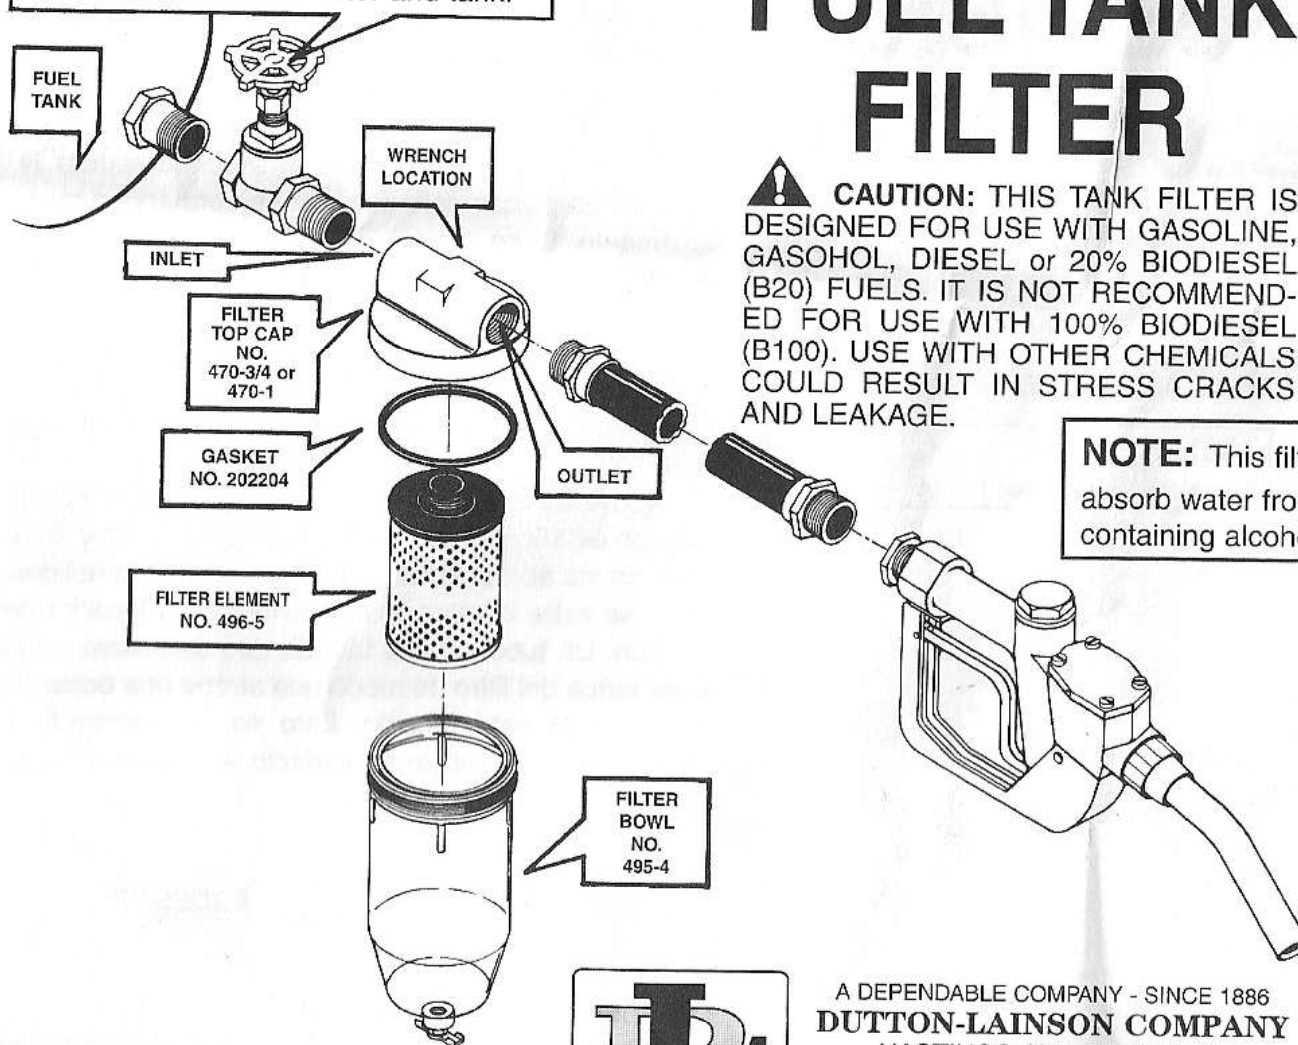

INSTALLATION INSTRUCTIONS

Attach filter top cap to storage tank valve on opening marked "IN". Be sure the shutoff valve is between filter and tank. Attach hose and nozzle to filter opening marked "OUT". **CAUTION:** Do not tighten filter cap using the filter bowl for leverage. Apply wrench to flat surfaces in center part of filter cap to tighten or remove. See illustration.

When installing the element and bowl apply a coating of oil to each side of gasket #202204. These components should be hand tightened only. Over tightening of the filter bowl will result in difficulty in removal at a later date. When assembly is complete check for leaks.

When element absorbs its capacity of water (approximately 1/2 cup) the fuel flow will slow down. Keep a 496-5 element on hand for replacement.

NOTE: This filter is rated for 150 psi pressure. If the fuel system is prone to violent pressure surges (water hammers, etc.) a pressure cushion device should be installed. A vertical capped pipe installed in the line near the filter so that it traps a pocket of air will serve this function. This is not necessary unless pressure surges above 150 psi occur.

Dwg. No. 202594 E9/06



A DEPENDABLE COMPANY - SINCE 1886
DUTTON-LAINSON COMPANY
HASTINGS, NE 68902 U.S.A.
TEL: 402-462-4141 FAX 402-460-4612
Made in U.S.A.

No. 491

Filter Bowl Wrench

- Fits bowl for easy removal.
- Hangs on fuel tank. (Ask your dealer!)

ACCESSORY ITEM

