



DISTRIBUTEURS POUR USAGE INTERNE

ZAPFSÄULEN FUR HAUSINTERNE NUTZUNG

DISTRIBUTORI AD USO PRIVATO



USE AND MAINTENANCE MANUAL

777

ENGLISH

E

THE PERSONNEL WHO USE THE DISPENSER AND THE TECHNICAL SUPPORT PERSONNEL MUST BE FAMILIAR WITH THE FIRST AID AND SAFETY RULES DESCRIBED IN THIS MANUAL.

Keep this technical manual in a place that is familiar and accessible to all the personnel who have access to the dispenser.

ENGLISH	naa	3
ENGLION	 pau.	ა

TABLE OF CONTENTS

Declaration of conformity	4	Meter accuracy	
		Permitted uses	8
First aid rules	. 5	Uses not permitted	8
Persons who have ingested toxic			
liquids		C) Installation	9
Persons who have suffered electric shock .	5	Packaging content	9
		Opening	
General	5	Reset knob	9
		Pulling out the tube support hook	9
Safety rules	5	Installing the tube and nozzle	9
Protective gloves	. 5	Installation general warnings	9
Permitted uses	. 5	Mechanical installation	
Overheating	5	Hydraulic connections	10
Smoking prohibited		Maximum length of suction tubing	
Electrical precautions		Recommendations and warnings	
Service		Installation of the check valve	
		and filter	10
Transport, handling and unpacking	5	Connecting the tubing to CUBE	10
3	_	Electrical connections	11
Rules for demolition and disposal	6	Connecting the CUBE 230V ac	
Packing material disposal		single-phase	11
Metal parts disposal		Starting	
Miscellaneous parts disposal		Filling the pump	
		Priming the pump	
A) Using and looking after manuals	6	Calibrating the meter	
List of manuals provided	6	Turning on the Cube	12
		•	
B) General information	6	D) Instructions for use	
CUBE dispenser	7	How to dispense fuel	13
K33 meter	7		
Self-priming pump and motor	7	E) Maintenance	
Identification label	7	Opening and closing the CUBE	14
Components of CUBE dispensers	8	Periodic inspections	
Technical specifications	8	Cleaning the pump filter	14
CUBE dispensers		Troubleshooting	
K33 meter	8	Spare parts for the CUBE	16

DECLARATION OF CONFORMITY

The undersigned, representing the following manufacturer

PIUSI S.p.A. 46029 Suzzara (Mantova) Italy

CERTIFIES

that the equipment described below:

description: DIESEL FUEL DISPENSER model: CUBE 56 - CUBE 70

complies with the following directives:

98/37/CE Machine Directive (and subsequent amendments)
 73/23/CEE Low-Voltage Directive (and subsequent amendments)

89/336/CEE Electromagnetic Compatibility Directive – versions for electrical and

electronic equipment (and further amendments)

This is in conformity with the following International Standards (and their subsequent amendments):

EN 809-2000 Pumps and pump units for liquids

EN 13617-1 (2004) Safety requirements for construction and performance of metering

pumps, dispensers and remote pumping units

EN 13012 (2001) Construction and performance of automatic nozzles for use on fuel

dispensers

Suzzara 01.01.06

President Otto Varini

Warning:

The CUBE MC dispensing units described in this manual are for professional use only.

FIRST AID RULES



Persons who have ingested toxic liquids: whenever fuel has been swallowed, do not induce vomiting, but have the injured person drink large quantities of milk or water.



Persons who have suffered electric shock: disconnect the power source, or use a dry insulator to protect yourself while you move the injured person away from any electrical conductor.

Avoid touching the injured person with your bare hands until he is far away from any conductor. Immediately call for help from qualified and trained personnel.

IN ALL CASES, SEEK MEDICAL ATTENTION IMMEDIATELY

GENERAL

CUBE dispensers are appliances designed for the private distribution of diesel fuel for motor transport.

All the models of the series share the same sturdy metal structure and the self-priming type pumps, while they differ in terms of the meter - mechanical or electronic - and in the fact that some models feature an electronic dispensing Control System.

Reliability of pumping units, accurate measurement of dispensed product and high Control System performance are CUBE's strong points.

SAFETY RULES



Protective gloves. Prolonged contact with hydrocarbons can cause skin irritation: when dispensing fuel always use PVC gloves conforming to the standard EN 388 cat.2.



Permitted uses. The unit must always be used for the purpose intended. Follow the instructions listed in the chapter Instructions for Use.



Overheating. To prevent overheating, make sure that the pump of the dispenser stops whenever fuel has not been dispensed for more than 2 minutes.



 $\begin{tabular}{ll} \textbf{Smoking prohibited.} When operating the dispenser and in particular during refuelling, \begin{tabular}{ll} \textbf{do not smoke} \\ \textbf{and do not use open flame.} \\ \end{tabular}$



Electrical precautions. There are dangerously high voltages inside the unit. Only qualified and authorized technical personnel are allowed to open the dispenser.



Service. Service of the dispenser must be performed by qualified personnel.

TRANSPORT, HANDLING AND UNPACKING

CUBE is shipped inside stackable cardboard packaging.

DIMENSIONS OF PACKAGING: h. = 480 mm / w. = 380 mm / d. = 380 mm

TOTAL WEIGHT: Cube 56/33 = 21.3 Kg Cube DC 12V = 22 Kg **PACKAGING WEIGHT:** 1.8 Kg

Cube 70/33 = 24.0 Kg Cube DC 24V = 22 Kg 1,8Kg

When the machine is not used, whether it is packed or unpacked, it must be stored in a place protected from the weather (rain, damp, sun, etc.) and from dust.

To remove the cardboard packaging, use a pair of scissors or cutters, being careful not to damage the appliance.

Fully open the packaging and take out the CUBE so that it can be taken to the place of final installation. Once the packaging has been removed, the station must always be kept in vertical position.

Packaging parts (cardboard, wood, cellophane, etc...) must be placed in specific containers and not left lying around or within reach of children, as these represent a potential risk hazard. They must be disposed of according to the regulations applicable in the country of use.

Check the integrity of the machine by making sure the shipped parts are not damaged in any way that could affect safey and operation. In case of any doubts, do not start the appliance but contact the manufacturer's after-sales service.

RULES FOR DEMOLITION AND DISPOSAL

The components must be given to companies that specialise in the disposal and recycling of industrial waste and, in particular, the

DISPOSAL OF PACKAGING.

The packaging consists of biodegradable cardboard which can be delivered to companies for normal recycling of cellulose.

DISPOSAL OF METAL COMPONENTS

The metal components, both painted and stainless steel, are usually recycled by companies that are specialised in the metal-scrapping industry.

DISPOSAL OF ELECTRIC AND ELECTRONIC COM-PONENTS:

these have to be disposed by companies that are specialised in the disposal of electronic components, in accordance with the instructions of 2002/96/EC (see text of Directive below).

DISPOSAL OF OTHER PARTS:

The disposal of other parts such as pipes, rubber seals, plastic components and cables should be entrusted to companies that special in the disposal of industrial waste.

ENVIRONMENTAL INFORMATION FOR CUSTOMERS IN THE EUROPEAN UNION



✓ European Directive 2002/96/EC requires that the equipement bearing this symbol on the product and/or its packaging must not be disposed of with unsorted municipal

waste. The symbol indicates that this product should be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electric and electronic equipment via designated collection facilities appointed by the government or local authorities.

USING AND LOOKING AFTER MANUALS

This **CUBE** manual shows the main features of the various models and provides details of:

- electrical and mechanical installation.
- first start up operations.
- daily use.

This collection of manuals represents an integral and essential part of the product and, according to the provisions of directive EEC 89/392, must be given to operators and maintenance staff in order to comply with the obligations relating to training/information referred to in directive EEC 89/391. Carefully read the instructions contained in these manuals, as these are most important for installation safety, operation and maintenance. The manufacturer disclaims all liability for injury to persons or damage to things, or the machine, in the event of this being used in a way different to that indicated in the instructions.

This manual **DOES NOT** cover other aspects such as:

- calibration of the K33 meter.
- For these aspects, refer to the specific manuals which accompany each station model.

Look after this manual carefully in a place protected from damp, heat, dust, oils, greases, etc., as it will be useful for future reference and consultation. Do not remove, tear or amend any parts of the manual for any reason. In case of loss or damage, ask the manufacturer for a copy, quoting the manual code.

This manual must always remain with the machine; in the event of the machine being sold, it must be given to the new user.

The company reserves the right to change CUBE features and specifications at any time.

List of manuals provided

M0042 Panther 56 / 72 Manual M0033 Meter K33 / K44 Manual M0127 Panther DC Manual

GENERAL INFORMATION

CUBE dispensers are designed for the transfer of diesel fuel for private use. Characterised by maximum safety and simplicity of use, CUBE dispensers are dependable, high-performance equipment that is quickly installed and ready for use.

Equipment and features are:

- Self-priming rotary vane pump with incorporated by-pass valve.
- Motor with protection grade IP55 and thermal protection, 230V AC single-phase.
- Brush motor powered by continuous current, low voltage, with intermittent cycle, closed type, IP55 protection class according to CEI

EN 60034-5, flange-mounted directly to the pump body (version Panther Dc).

- Four meters of anti-static rubber tube for fuel.
- Automatic type dispensing nozzle with onoff switch integrated into the nozzle rest.
- Steel body with anti-corrosion treatment and paint finish.
- 110/120 V AC-60 Hz motor on request.

CUBE dispenser

The CUBE dispenser is equipped with a Series K mechanical type meter.

K33 meter

Series K meters are mechanical oscillating disk meters designed to allow the precise measurement of diesel fuel.

The meter is provided with a non-resettable counter in litres and a partial resettable indicator:

 the partial indicator has three digits and the total indicator has six digits.

For additional information, consult Technical Bulletin M 0033 "Mechanical Meters, Use and Maintenance."

Self-priming pump and motor


CUBE dispensers are equipped with selfpriming, volumetric, electric rotary vane pumps for the transfer of diesel fuel, provided with a by-pass valve. Such a valve allows functioning for brief periods of time even with the dispensing nozzle closed. The motor which is directly coupled to the pump body is asynchronous, closed-type selfventilated, AC single-phase.

For additional information and technical data, consult Technical Bulletin M0042 "PANTHER 56/72".

Nozzle

The nozzle supplied with CUBE is of automatic type and fitted with a shut-off device for full tank.

Identification label

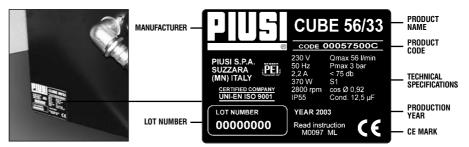



The label is attached to the left side of the dispenser.

WARNING

Before installing, always make sure the dispenser model is correct and suitable for the available power supply (voltage/frequency)

Components of CUBE dispensers

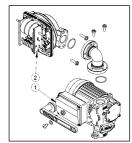

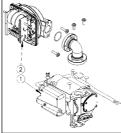

The pictures aside show the CUBE components. In particular, those components that distinguish the various models of the CUBE product line are numbered and described.

Drawing Ref. Description

1 Pump-Motor Unit

2 Meter

Technical specifications

CUBE dispensers MODEL	Supply voltage	Absorption (A)	Power (W)	Flow rate (I/m')
CUBE 56 / 33 > 230/50	230 V / 50 Hz - 1~	2.4	370	55
CUBE 56 / 33 > 230/60	230 V / 60 Hz - 1~	3.3	520	62
CUBE 56 / 33 > 110/60	110 V / 60 Hz - 1~	8.25	250	62
CUBE 56 / 33 > 110/50	110 V / 50 Hz - 1~	6	250	55
CUBE 70 / 33 > 230/50	230 V / 50 Hz - 1~	3.3	500	72

K33 - K44 meter

Partial meter indicator Main total indicator 3-digit resettable

6-digit non-resettable

Meter accuracy

The K33-K44 meters, after correct calibration in the field, provide the following performances: ACCURACY: +/- 1% (after calibration, for flow rates of over 10 l/min)

Permitted uses


Transfer of diesel fuel with a viscosity from 2 to 5.35 cSt at 37.8° C and PM flash point \geq 55° C.


Uses not permitted

The transfer of fluids with different characteristics than those indicated above is not allowed. In particular:

Fluids not permitted	Related danger:
Petrol	Fire/explosion
Inflammable liquids with PM < 55°C	Fire/explosion
Water	Pump oxidation
Food liquids	Contamination of the same
Liquids with viscosity >20 cSt	Motor overload
Corrosive chemical products	Pump corrosion
·	Injury to persons
Solvents	Fire/explosion
	Damage to gasket seals

C INSTALLATION

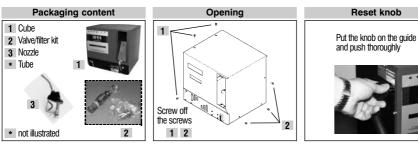

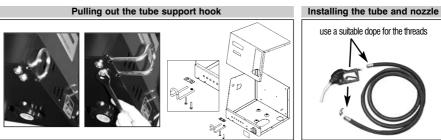

Installation general warnings

The CUBE dispenser can be installed outside. Nevertheless, it is advisable to locate it under the shelter of a roof to ensure the dispenser's longevity and provide greater comfort during refuelling in the event of bad weather. The installation of the dispenser must be carried out by skilled personnel and performed according to the instructions provided in this chapter.

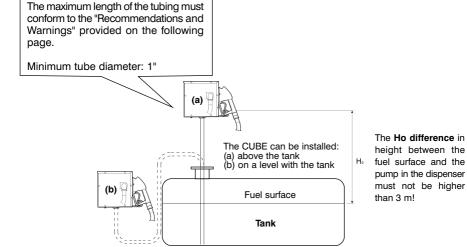


Fig. 2.1 - Dispensing system installation diagram

Mechanical installation

Before beginning the installation, verify that no packing material has been trapped in the tubing.

Prepare suitable stilts or fixing brackets

depending on the fixing position of the CUBE. The tube coming from the tank must be aligned to the threaded inlet of the pump filter which is located under the CUBE.

Hydraulic connections

Warning. Remove the protective caps from the threads. The hydraulic connections can be made with flexible or rigid tubes with adequate joints, as

long as they are done by skilled personnel, in a workmanlike manner, with respect for the regulations in effect in the country of installation.

Maximum length of suction tubing

The maximum length of the tubing, the diameter of the tubing, the difference in height, are parameters that are tightly linked to creating suction conditions. The latter must not be such as to create backpressure greater than 0.6 bar. It follows as a consequence that, after respecting the minimum diameter of the tubing specified in

the Recommendations and Warnings below, the length of the tubing decreases as the difference in height that the diesel fuel must overcome increases and vice versa: in fact, the back pressure progressively increases by 0.08 bar for every meter increase in the static height of the pump with respect to the level of the diesel fuel in the tank.

Recommendations and warnings

- The suction tubing must resist a pressure of at least 10 bar and must be of a diameter NOT LOWER than 1".
- The tubing must be suitable to functioning under backpressure.
- Use tubing and accessories suitable for use with diesel fuel. Materials that are not suitable for use with diesel fuel can cause damage to the pump, harm people and cause pollution!
- Any curves in the suction tubes must be of the widest radius possible to limit the loss of head.
- Make sure that the suction tubing is clean and free of scum.

Installation of the check valve and filter

At the intake end of the tube, a check valve and a suction filter must be attached that must remain immersed at the bottom of the tank. The check valve and the filter are provided as part of the equipment with the CUBE dispenser.

SUGGESTION: Before connecting the tubing to the pump filter it is a good idea to fill the tubing with diesel fuel to facilitate priming the pump during the phase of putting it into operation.

The check valve keeps the tubing constantly filled with diesel fuel.

47 - Check valve
48 - Suction filter

Fig. 2.2 - Check valve and filter installation

Connecting the tubing to CUBE

Screw the other end of the tubing to the pump filter.

WARNING

Do not use conical threaded connectors that could cause damage to the threaded connector on the pump filter.

Electrical Connections

The electrical connections must be performed in a workmanlike manner by skilled personnel, respecting the regulations in effect in the country of installation.

The maximum acceptable variations from the electrical parameters are:

- voltage ± 5 %.
- frequency ± 2%

Connecting the CUBE 230V ac single-phase




Simply introduce the cable with the Schuko plug into the hole at the bottom of the CUBE (see picture aside) and connect the plug to a grounded outlet of the household type.

Connect the ground wire to a grounding connection prepared according to the regulations.

WARNING

CUBE dispensers are not equipped with circuit breakers. It is therefore strongly recommended to install on the plug a 30-mA residual current operated circuit breaker.

Connecting the c.c. DC CUBE

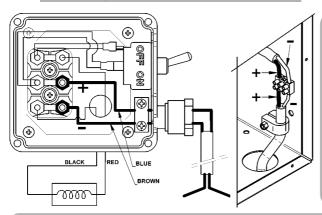

WARNING

Connect the power cord following the polarity: **blue** = + / **brown** = - and lock it as shown in the drawing.

Refer to Panther DC (M0127) manual for information concerning the fuses (30A for the 24V version and 40A for the 12V version).

The direction of the selector should be as shown in the picture

Starting

Filling the pump

The pump provided with the CUBE is a self-priming pump capable of suctioning an empty tube, nevertheless, the pump should be partially filled with diesel fuel before

turning it on for the first time.

It is left to the technician's experience to determine the best way to fill the pump.

Priming the pump

It is advisable to oversee the first priming phase to make sure that it is happening in a reasonable amount of time:

depending on the length and fill status of the

priming tubes, the priming of the pump can require from several seconds to several minutes, as a function of the characteristics of the system.

WARNING

If this phase is excessively prolonged, stop the pump and verify that:

- the pump is not running completely dry;
- the suction tubing is air-tight and completely immersed in the fluid to be pumped;
- the suction filter is not clogged;
- the difference in height for priming is not greater than 3 meters;
- the residual air in the tubes has been evacuated.

Calibrating the meter

Before using the CUBE station, check the METER ACCURACY.

For this purpose, proceed as follows:

- Take out the nozzle and start the pump as described in the above paragraph.
- · Run the fuel into a calibrated container.

WARNING

- To correctly check accuracy, always keep to the following instructions:
- Use a precision sample container, featuring a graduated measuring scale, with a capacity
 of at least 20 litres.
- Before making the check, always make sure you have eliminated all the air from the system and then run the fuel until a full and regular flow is achieved.
- Dispense in a continuous way at maximum CUBE flow rate.
- Stop the flow by quickly closing the nozzle.
- Reach the graduated area of the container, avoiding prolonged dispensing at low flow rates; prefer short dispensing operations at maximum flow rate.
- Compare the reading provided by the container, with that provided by CUBE, after waiting for all the froth to disappear.

If accuracy is NOT satisfactory, proceed to CALIBRATE THE METER according to the instructions in the M0033 manual.

WARNING

Differences up to 0.2 litres out of every 20 litres fall within the guaranteed accuracy of +/- 1%.

Turning on the Cube

For all CUBE versions it is sufficient to:

- take the dispensing nozzle away from the rest;
- Lift the rest (ON) (Fig. 2.5).





Fig. 2.5 - Turning on the Cube

INSTRUCTIONS FOR USE


General Warnings

- Transfer of fuel must always occur in the presence and under the control of the Operator.
- Keep the dispensing nozzle closed until it is inserted in the container to be filled.
- If the nozzle lever is not completely pressed, the automatic release device will not work.


The functions and instructions for use of the K33 mechanical meter are described in the

relative manual M 0033.

How to dispense fuel

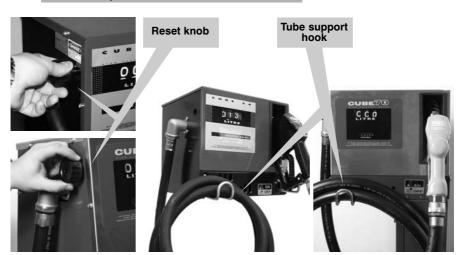

- 1) Rotate the reset knob in a counter-clockwise direction to completely zero-out the partial indicator. The total indicator cannot be reset to zero.
- 2) Extract the dispensing nozzle (a) and insert it in the container to be filled.
- 3) Set the starting handle to position ON (b): the pump starts.
- 4) Press the nozzle lever and keep it pressed until you have dispensed the desired quantity.
- 5) When dispensing is finished, set the start handle to OFF (c): the pump stops. Replace the nozzle (d).
- 6) Rehang the tube on the tube support hook, so that it will not be crushed by moving vehicles.



MAINTENANCE

Opening and Closing the CUBE

- Screw off and remove the three cross-head screws on the left side of the CUBE (Fig. 4.1, screws A).
- Screw off and remove the three cross-head screws on the right side of the CUBE (Fig. 4.1, screws B).
- Raise the CUBE higher part.
- To reclose it, perform these steps in reverse order.

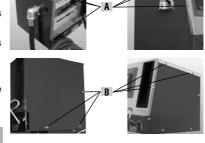


Fig. 4.1 - Opening the CUBE

Periodic Inspections

- Check weekly and keep the pump body, tubing and flanges clean to promptly reveal any leaks.
- Keep the dispensing nozzle tube clean and especially the hole for the excess pressure probe at the end of the nozzle tube (Fig. 4.2).
- With equal frequency or at least every time the tank is filled, clean the filter and check valve at the bottom of the tank.
- Every three months (or more often in case of doubt) verify the accuracy of the meter.





Fig. 4,2 - Nozzle tube and probe

Cleaning the pump filter

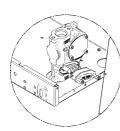

The pump filter must be cleaned weekly or more often whenever a reduction in flow rate is noticed.

The frequency required depends most of all on the quantity of fuel dispensed, but also on other causes as well, such as dispensing fuel immediately after refilling the tank, which stirs up sediment which normally lies at the bottom.

To gain access to the filter:

- Remove the upper part of the Cube (and the side part for the version CUBE 70), by unscrewing the 6 side screws (see Opening and Closing the Cube)
- · Screw off the 2 screws on the filter cover.
- To clean it, it is sufficient to wash it and blow through it.








Troubleshooting


Problem	Possible Causes	Possible Solutions	
	Lack of electric power	Set the starting handle to position ON. Reset the external residual current circuit-breaker. Check the electrical connections.	
Motor not turning	Fuses burned out	Replace the fuses in the electric panel	
	Faulty switch on the electric panel	Change the switch	
	Motor Problems	If the rotor is jammed, dismount and check for damage and obstructions, then remount. Contact the Service Department	
Motor won't start with nozzle closed	Electric voltage too low	Check that the voltage is not more than 5% below the nominal voltage	
	Excessive suction pressure	Lower the CUBE with respect to the tank or increase the diameter of the tubing	
	High loss of head	Use shorter tubing or of greater diameter	
	Suction tube resting on the bottom of the tank	Raise the suction tube	
	Low level in the suction tank	Refill the tank	
Low or no flow rate	Air entering the suction tube or in the pump	Check the connections seal in the tubing and the level of diesel fuel in the tank	
	Motor low rotation speed	Check the voltage at the motor. Adjust the voltage and/or use cables of greater cross-section	
	Check valve blocked	Clean or replace	
	Tank filter clogged	Clean the filter	
	Pump filter clogged	Clean the filter	
	Fluid leaking	Check the seal of the connections and the condition of the rubber tubes	
	Meter chamber obstructed	Clean the meter chamber	
Meter accuracy not	Air in the suction line	Check the seals of the connections	
sufficient	Measuring chamber dirty	Clean the meter measuring chamber	

Spare parts for the CUBE

CUBE 70

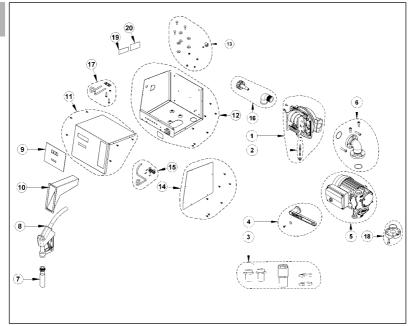

CUBE DC-56

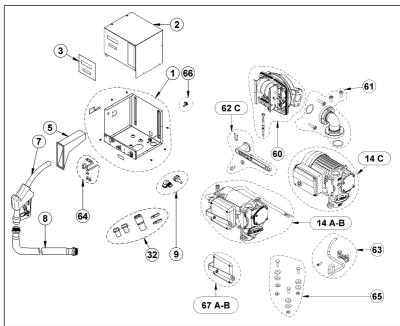

MANUFACTURER: PIUSI S.p.A.

DOCUMENT TYPE: General description and instructions

for its installation, activation,

use and maintenance

EDITION: Bullettin M0097A Rev.1

PRODUCT: Diesel fuel dispenser for private use

with meter

MODEL: All of the models of the CUBE product line,


with mechanical/electrical meters, single-phase/three-phase in various voltage/frequency combinations

CONFORMITY: CE Marked

(see Declaration of conformity, page 4)

TECHNICAL SUPPORT: Provided by the service departments

of our authorized resellers

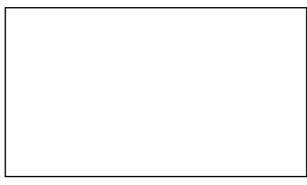

Authorized reseller's stamp Timbre du revendeur autorisé Stempel des autorisierten Vertragshändlers Timbro del rivenditore autorizzato



M 0097A Rev.1